
PLC LIGHTING

81557

INSTALLATION INSTRUCTIONS:

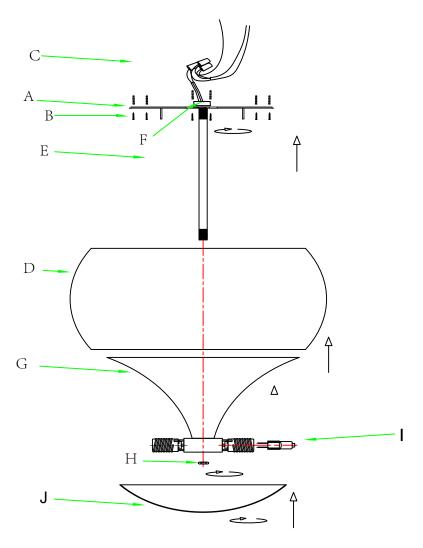

- 1, Ensure mains supply is switch off.
- 2, Fit crossing bar(A) into mouting surface with self-tapping screws(B).
- 3, Make the wiring connections: Using wire connectors (C) connect the house white wire(s) to the fixture white(or ribbed) lead(s); connect the house black(or red) wire(s) to the fixture black(or smooth) lead(s). Make sure there are no exposed wires or stands, and the connections are secured.
- 4, Fit glass shade(D) onto crossing bar using metal rod (E) and secured with metal sheet (F).
- 5, Attache metal cup (G) onto glass body securing with metal nut (H).
- 6, Fit bulb(s) (I) firmly into lampholder(s).
- 7, Attache metal disk(J) onto fixture.

WARNING:

- Electricity supply required 110-120v 60 htz alternating current.
- Use only the correct light bulbs as stipulated on the luminaries .
- Disconnect the power and allow fitting cool down before cleaning or changing bulb(s).
- If any malfunction occurs, switch of mains and contact a qualified electrician.
- Do not modify this unit in any manner.